


RTS Motor Hardwired

Adjusting Motor Limit Positions


Note: The following procedure will only work if the limit is accessible, otherwise please refer to 'Erasing the Memory of the Motor' instructions.

Adjustment of the Bottom Limit Position


Press the Down button and send the product to the existing lower limit position.

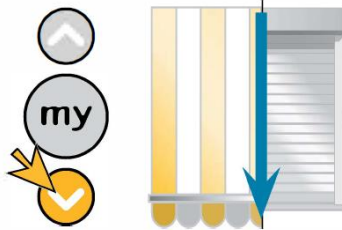


Press and hold the Up and Down buttons until the product jogs.

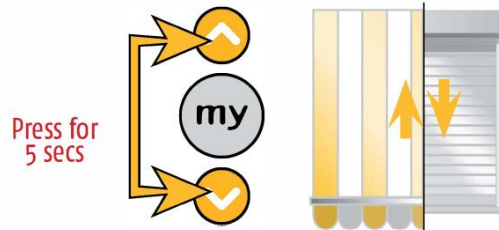

Adjust to the correct position using either the Up or Down button.

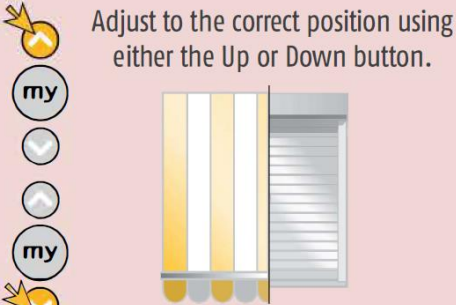


Press and hold the **my** button until the product jogs.

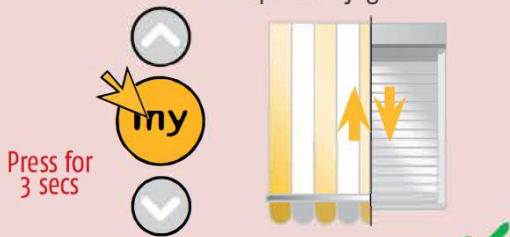


New limit position set ✓

Adjustment of the Top Limit Position (Not Applicable for Orea RTS)


Press the Up button and send the product to the existing upper limit position.

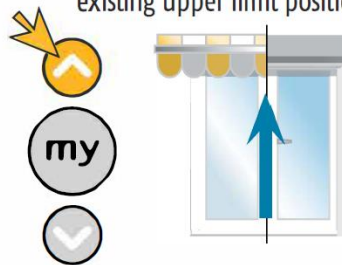


Press and hold the Up and Down buttons until the product jogs.

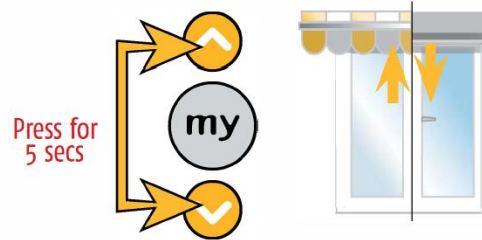

Adjust to the correct position using either the Up or Down button.

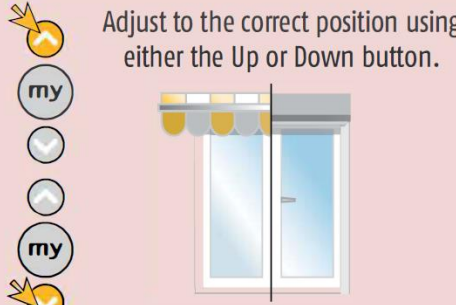

Press and hold the **my** button until the product jogs.



New limit position set ✓

Flowchart for Adjusting Motor Limit Positions

IMPORTANT NOTE:

This procedure will only work if you have an existing remote that has already been programmed to the motor.

