

 
 
Sonesse 30 WF Li-ion RTS

Adjusting the Motor Speed

Note: The motors default speed is 20 rpm. The motor speed range is 10-28 rpm, changing with increments of 2 rpm. The motor will no longer jiggle once the maximum or minimum speed has been reached.

1. MOTOR SPEED SETTING

1. Send the motor to the mid-point
2. Press & hold the UP, MY & DOWN buttons until the motor jogs
NOTE: Green & Yellow LED begins flashing alternatively
3. The motor will continually travel up & down.
 - To increase the speed, continue to Step 2.
 - To decrease the speed, move to Step 3

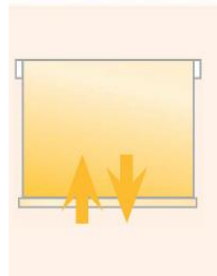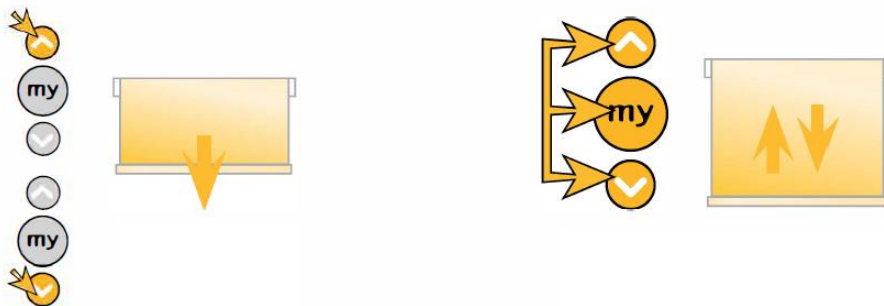


2. Increase Motor Speed

Hold the UP button until the motor jogs. Repeat the process to further increase speed




3. DECREASE MOTOR SPEED

 Hold the DOWN button until the motor jogs. Repeat the process to further decrease the speed

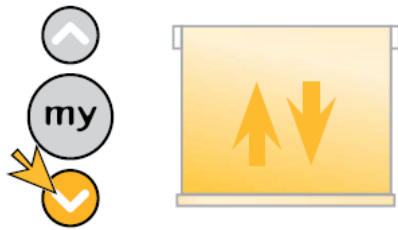

4. SAVE THE NEW MOTOR SPEED

Hold the MY button until the motor jogs

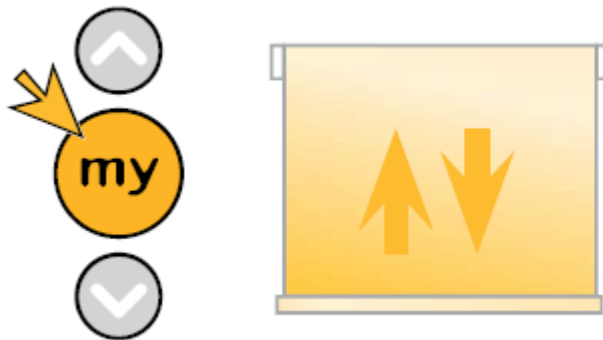

FLOWCHART FOR ADJUSTING THE MOTOR SPEED

