

Kona Folding Arm Awnings

Installation Info

Position of Installation Brackets - All Awning Models

The installation brackets should be positioned as close to the arm bracket as possible.

Rain Hood - All Awning Models (Excluding Semi-Cassette)

- The hood profile 30mm longer than total awning width
- Total hood width 80mm longer than total awning width
- The hood brackets should be assembled 600mm from the end brackets of the awning
- Maximum distance between hood brackets should not exceed 1500mm

Adjustment of Projection Angle - All Awning Models

The projection angle should be adjusted as follows:

1. Make sure that the awning is half way projected. (Awnings with up to 3.0m projection can be fully projected)
2. Insert the crank handle hook into the eye of the folding arm adjustment unit.
3. Rotate the crank handle clockwise or counter-clockwise (maximum 3 turns) to adjust the projection angle.
4. Move the crank handle to the next adjustment unit.
5. Repeat steps 2 – 4 until you have got the desired projection angle.

The crank handle should be held straight under the adjusting unit when changing the projection angle.

If your awning is motorised, the limit stop of the motor could be affected and may need to be adjusted after change of projection angle.