

PowerView Scene Controller Battery Replacement

Replacing the batteries in the Scene Controller module will not cause the loss of any window covering programming, including GROUPS and Favourite. The remote uses two CR 2032 batteries.

1. For the Scene Controller Remote, slide your thumb in the indentation, gently lift and remove the remote module from the Scene Controller. For the Surface Remote, remove the Surface from its mounting plate by twisting the Surface counter-clockwise. Push the Scene Controller module out from the back of the Surface.
2. Rotate the back cover of the Scene Controller module clockwise to unlock.
3. Remove the back cover from the Scene Controller module.
4. Using a finger or small screwdriver, gently lift and remove the old batteries.
5. Insert new batteries, making sure each is snug.
6. Align and replace the back cover onto the backside of the Scene Controller module.
7. Rotate the back cover counter-clockwise to lock the back cover in place.
8. Align the ribs on the Scene Controller module with the grooves on the Scene Controller or the Surface.
9. Gently push the remote module into the Scene Controller or the Surface until it is snug.

