


Product View

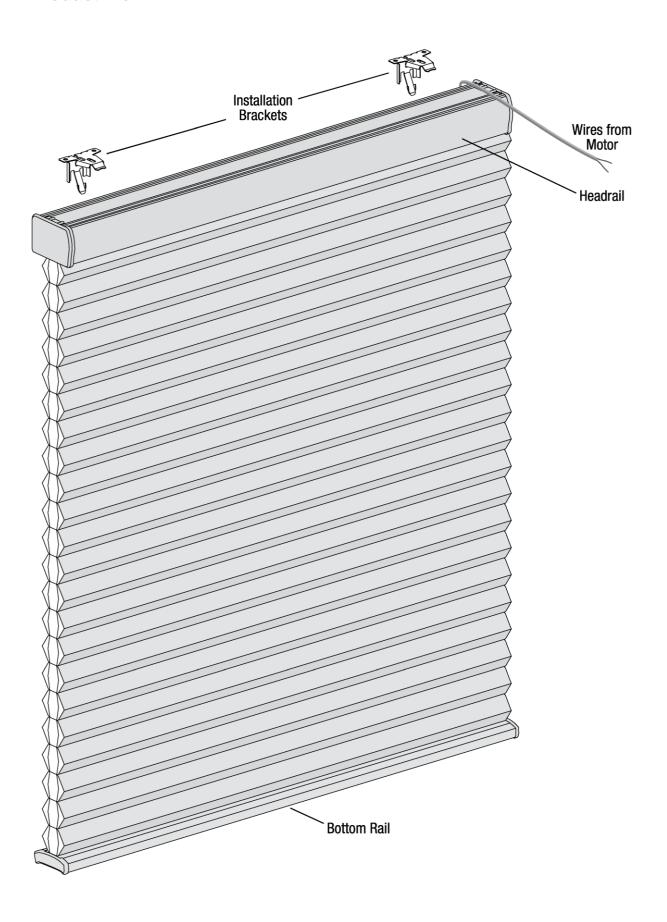


Install the Shade

The Hard-wired Motorised lifting system must be wired to a motor control device to operate. The motor control device can be the Platinum Wired Wall Switch or a 3rd party motor controller. If a 3rd party motor controller is selected, the Platinum Remote Control and Wireless Wall Switch cannot be used to operate the shade.

Connect CELLULAR SHADES Hard-wired Motorised Shades with a Platinum Wired Wall Switch


The Platinum Wired Wall Switch is used to provide control over hard-wired motorised shades.

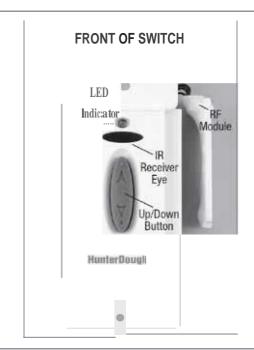

Simple UP/DOWN control of the blind using the front switch.

Infrared control using the Platinum Remote Control by pointing at the IR receiver eye.

The IR receiver eye is also used when programming an RF channel from the Platinum remote control or Platinum Wireless Wall Switch.

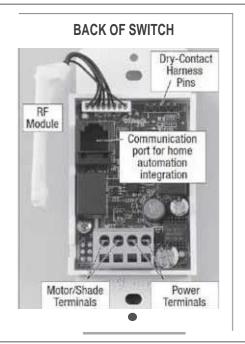


RF Module (included) allows RF Control from the Platinum Remote control or Platinum Wireless Wall Switch.

Dry contact harness for relay/switch control from Automation systems.

Communications port for advanced automation via RS232.


Switch Connections

Connect the Wires

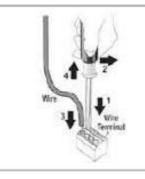


- Insert small screwdriver.
- Pull back on screwdriver to open the wire terminal Connection.
- 3. Insert wire into the circular wire terminal connector,
- Remove screwdriver to lock the wire.

Wiring Diagrams

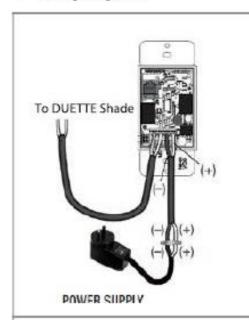


Small power supply 34,077,000 can be used for one motor/switch.

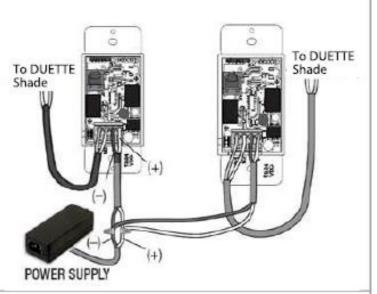

Large power supply 34,064,000 can be used for up to 4 motors/switches.

It is possible to connect multiple (up to 3 maximum motors to each individual switch. In this scenario, all motors will act as a group when travelling up/down from the switch or remote control.

Automation

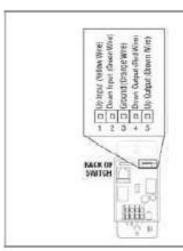

The Platinum wall switch has both dry contact inputs and outputs to allow access to advanced control systems, as well as mechanical switches or relays.

A communications port is also available for automation systems utilising RS232 serial control.