

Glydea DCT


Changing the Touch Motion Mode

Note: A small paper clip is required for pressing the Mode and Set buttons

1. Enter Programming Mode



Press and hold the Mode button until the Green LED appears.

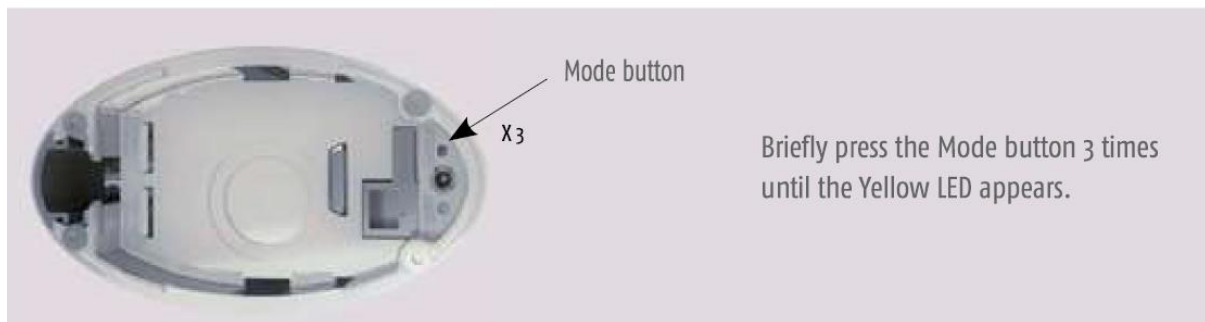

Briefly press the Mode button 3 times until the Yellow LED appears.

2. Change the Touch Motion



Briefly press the Set button to toggle between modes.

Yellow LED on = Touch Motion Off
Yellow LED blinks slow = Low Sensitivity
Yellow LED blinks fast = High Sensitivity

3. Save Touch Motion Settings



Press and hold the Mode button until the Yellow LED turns off.

Flowchart for Changing the Touch Motion Mode

