

## Q-Motion Gen 3

### Delete or Unlearn a Remote Control

Use these programming instructions when there is a need to delete a blind from a remote

1. Send blind to the top limit

2. Using a paper clip, **press the program button** on the back of the remote control (The channel LED's will scroll back and forth when in programming mode)

3. **Press and hold the UP button** until the blind moves downwards

4. **Pull down on the bottom bar** more than 250mm (The blind will jog up and down in response)

5. Using a paper clip, **press the program button** on the back of the remote control (The channel LED's will scroll back and forth when in programming mode)

6. **Press the DOWN button and release.** The blind will jog, move to the upper limit and then jog again

Blind is now removed from the remote control and can be reprogrammed onto a new one