



Somfy Automation

Deleting Eolis & Soliris RTS Sensor


Deleting the Sensor from the Motor Memory

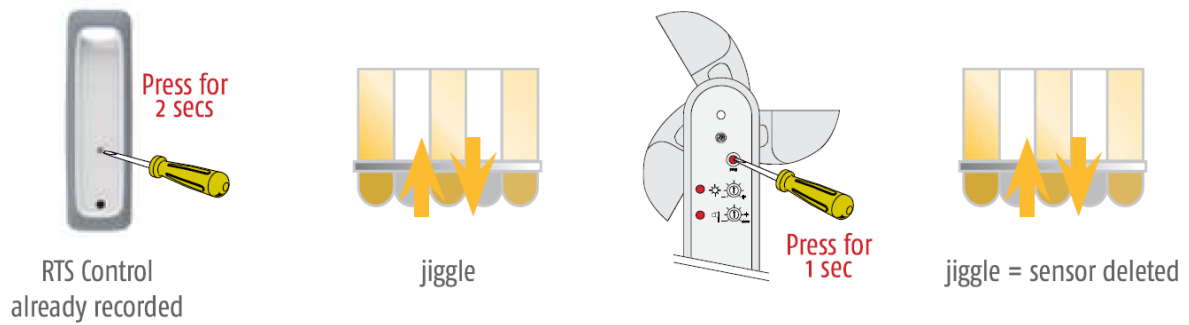


Verifying Sensor Deletion

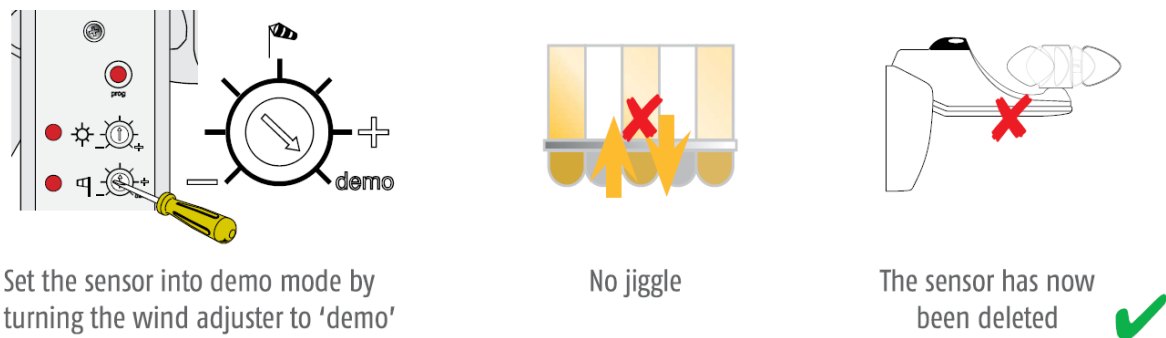

Deleting all RTS Sensors

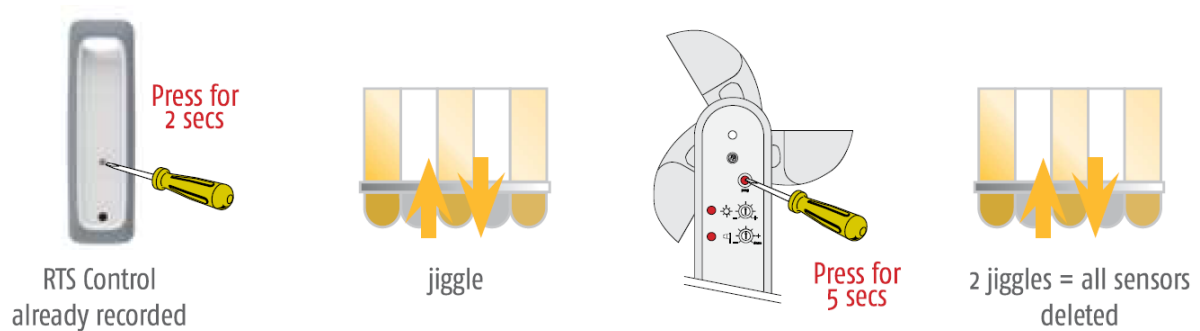

Flowchart for Sensor Deletion

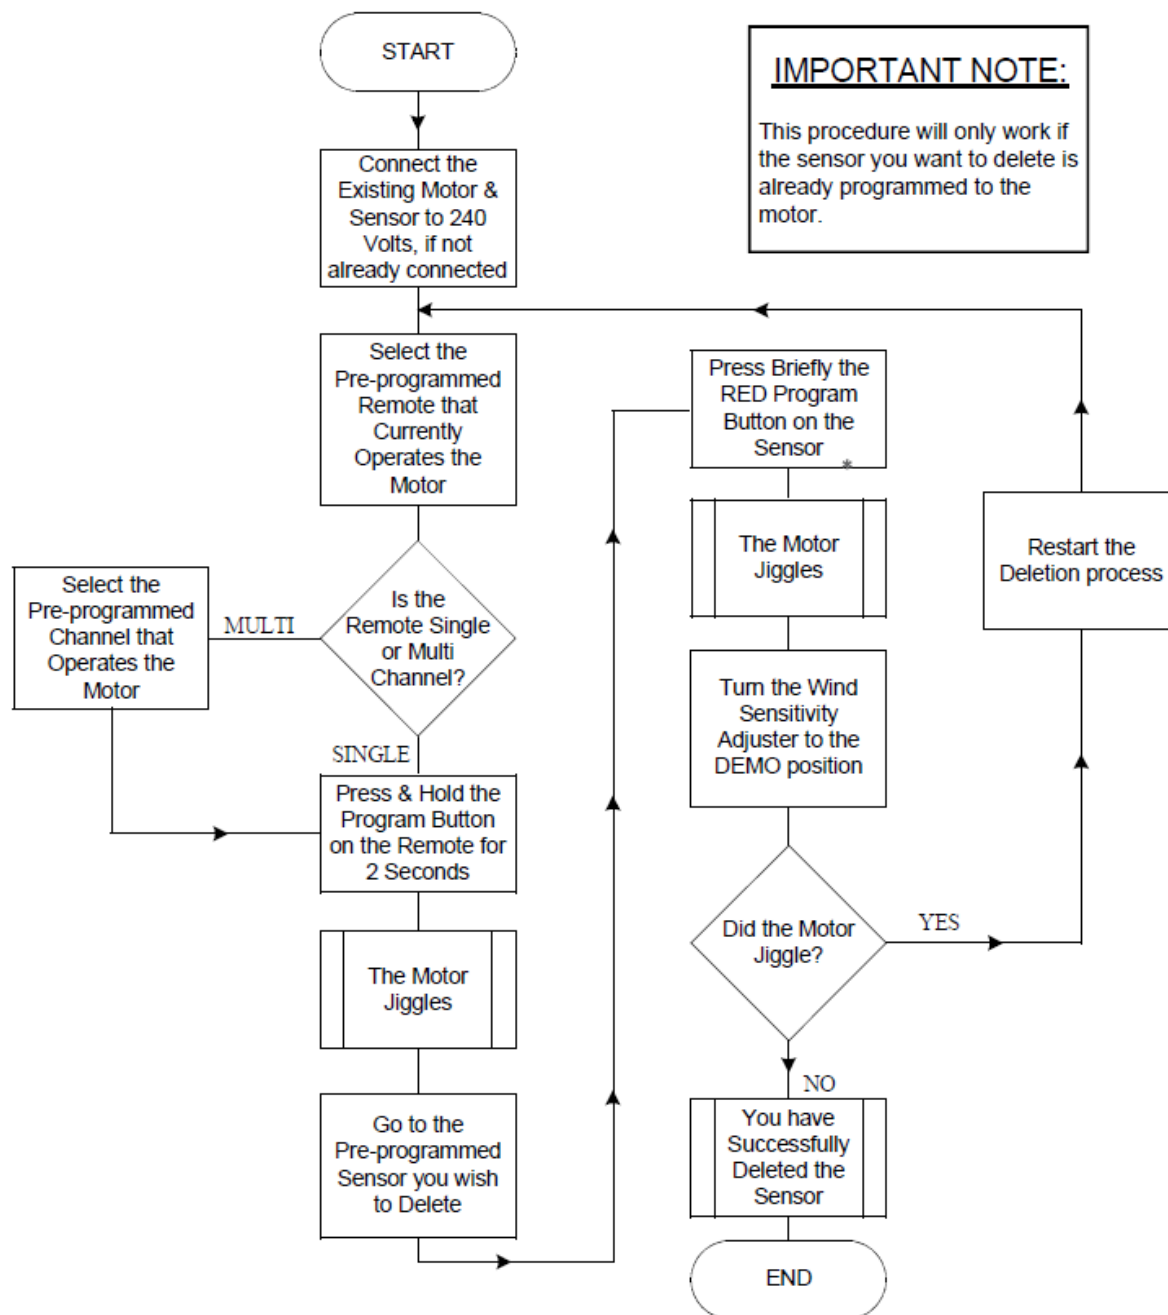

Note: Keep pressing the program button until the motor jiggles twice to delete all sensors