Irismo Wirefree Deleting the Favourite MY Position

Deleting the Favourite Position

- 1. Press my: the motorised product starts to move, and stops in the favourite MY position
- 2. Press MY button again until the motorised product moves: the favourite position MY is deleted

