

Irismo Wirefree

Erasing the Control Point from the Memory of the Motor

Erasing the Control Point

Note: This reset deletes all the local remote control, however the end limit settings and favourite position are retained

1. To delete all the programmed remote control, press and hold the motor LED button until the motorised product moves twice.
2. All the remote control are deleted.