

Irismo Wirefree

Erasing the Memory of the Motor

Erasing the Memory

Note: This reset deletes all remote control, all the sensors and all the end limit settings, and resets the motor's favourite MY Position

1. To reset the motor, press and hold the LED button until the motorised product moves 3 times. All the settings are erased.