 
 
Altus 28 WF Li-ion RTS

Erasing the Memory of the Motor (Factory Reset)

Erasing the Memory of the Motor





Hold the program button on the motor head until the motor jiggles 3 times.

Flowchart for Erasing the Memory of the Motor (Factory Reset)

