


Glydea DCT

Erasing the Memory of the Motor & Remote

1. Erase the Motors Memory



Using a paperclip press and hold the Set button for 12 seconds.

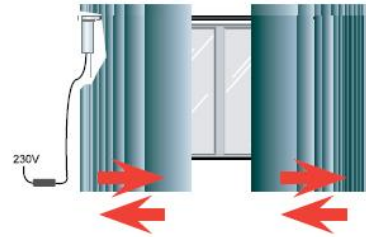

The motor will jiggle 3 times
and a Red LED will light up.



Release the "Set" button. The motors memory has been erased.

Flowchart for Erasing the Memory of the Motor & Remote

