


LS 40 WT Wiring Diagram

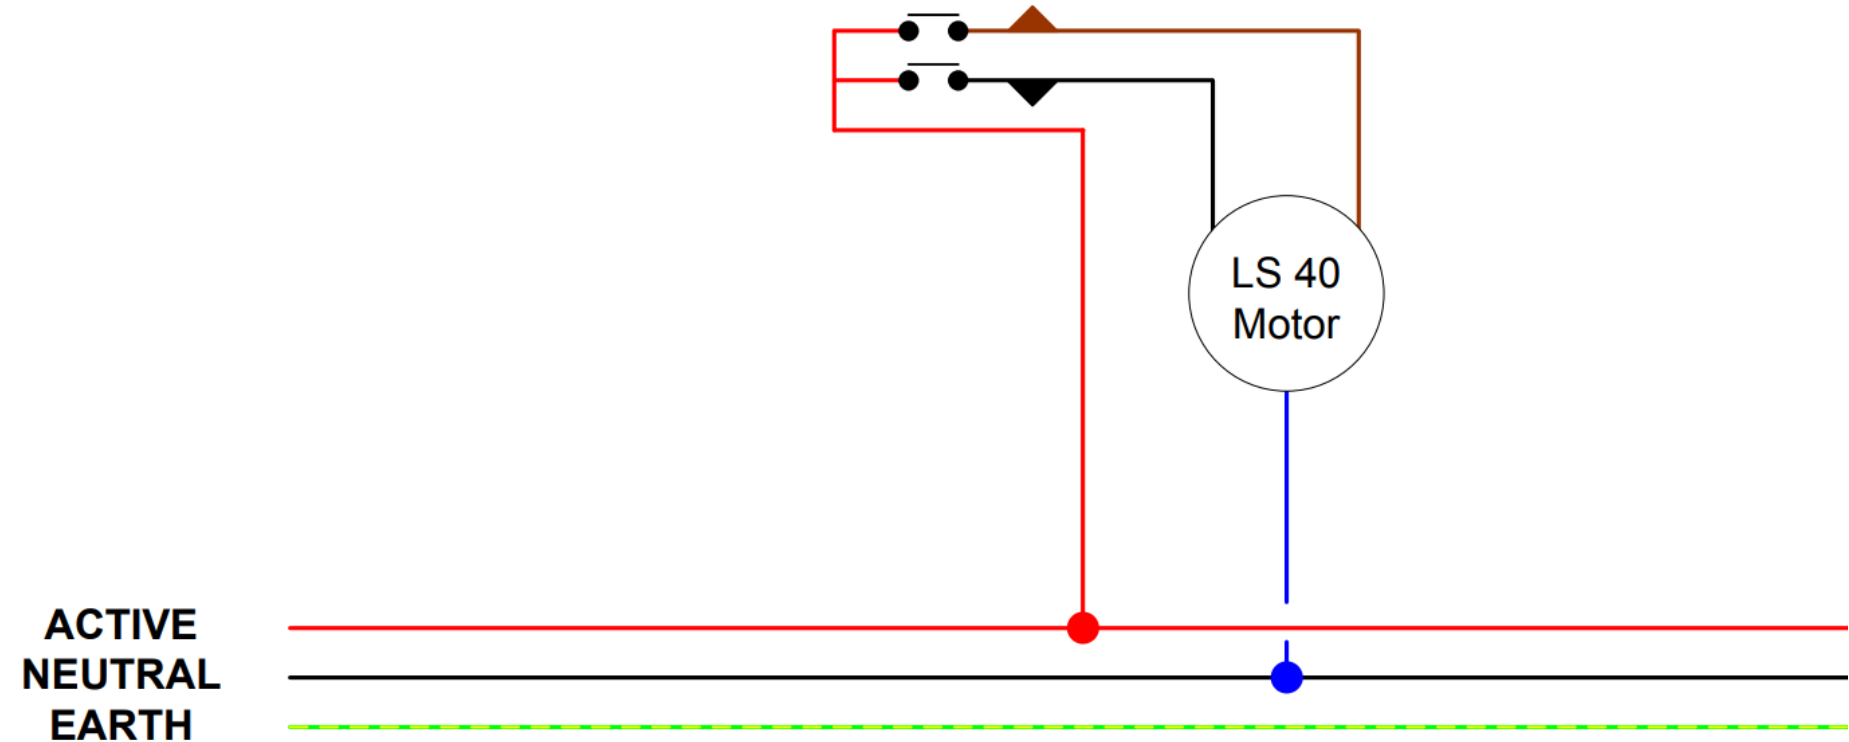

**ACTIVE
NEUTRAL
EARTH**

230 V 50Hz

Note:

Directions can be reversed by swapping the two active wires from the motor to the appropriate terminal on the Inis Uno. Directions are determined by the motor's position & the direction of roll.