


LT 50 Mariner WT Wiring Diagram

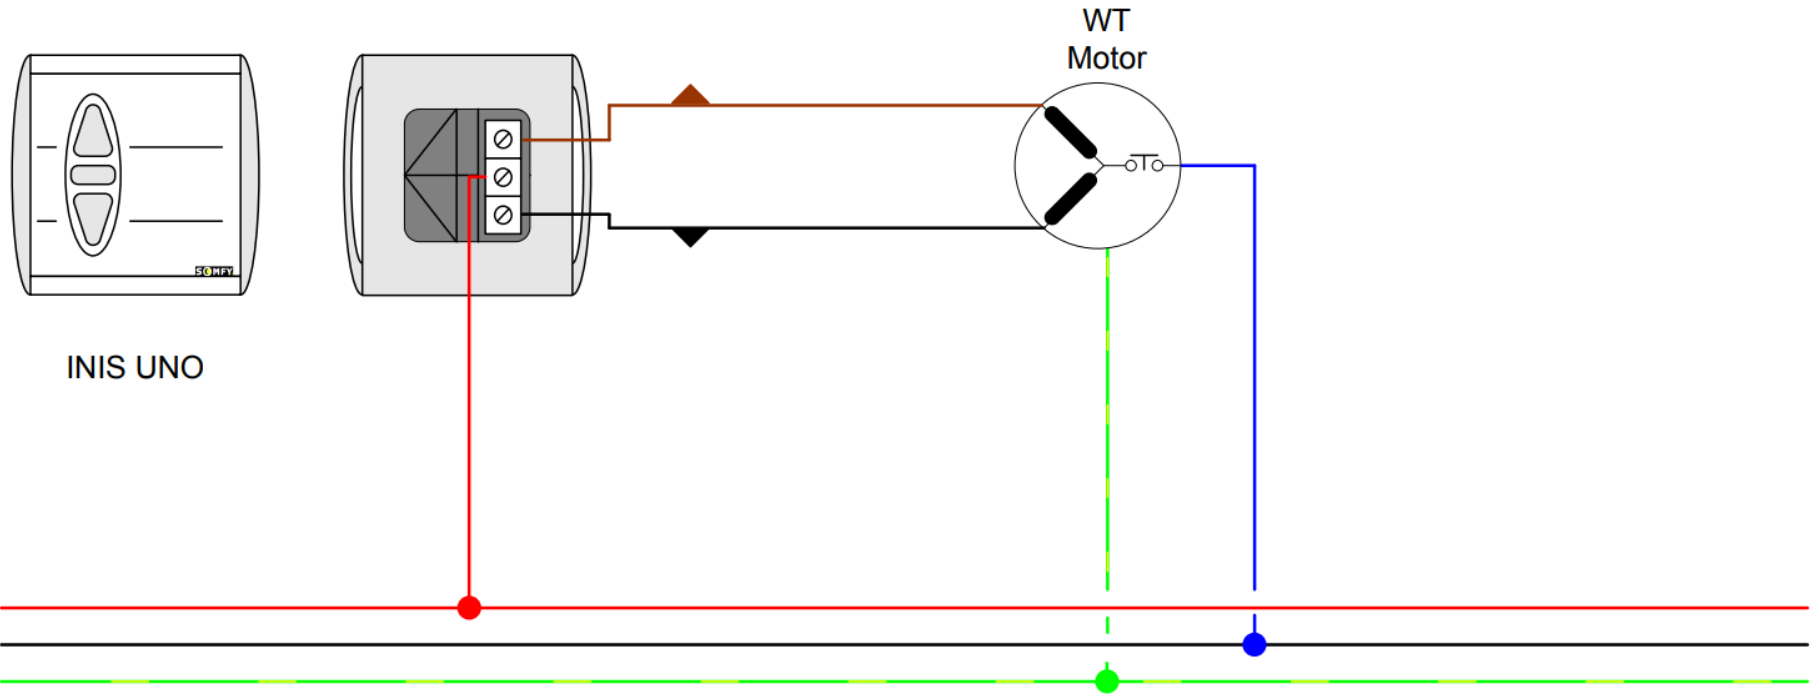

Note:
Directions can be reversed by swapping the two active wires from the motor to the appropriate terminal on the Inis Uno. Directions are determined by the motor's position & the direction of roll.

ACTIVE
NEUTRAL
EARTH

240 V 50Hz