

RTS Motor Hardwired

"MY" Position Programming

Note: The following procedure will only work after programming has been completed.

Setting an Intermediate Position


Use the Up or Down button to move the product towards the desired intermediate position.

Stop the product at the desired intermediate position.

Press and hold the **my** button until the product jiggles.

Press for 5 secs

"MY" position set ✓

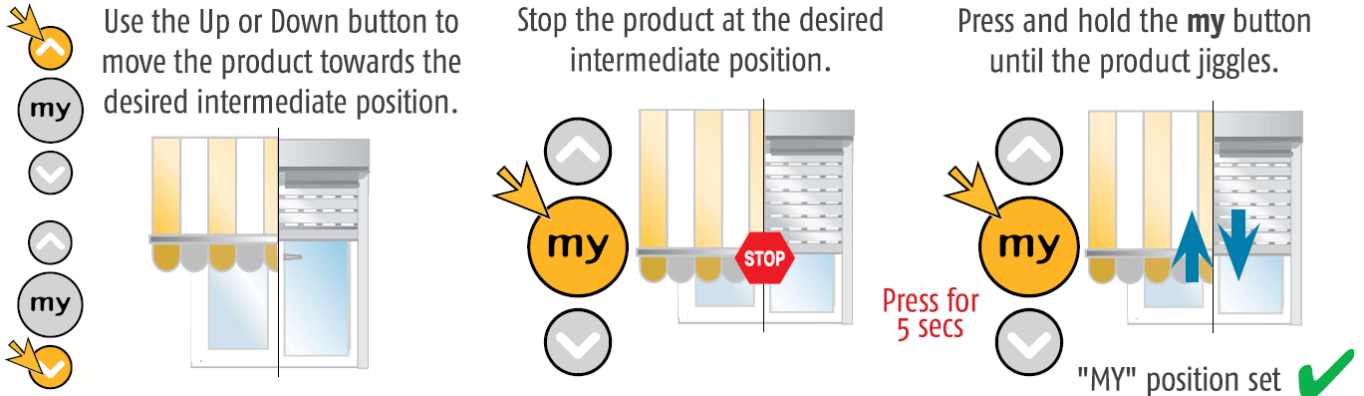

Deleting an Intermediate Position


Send the product to the intermediate position by pressing the **my** button.

When the product has reached the intermediate position and stopped, press and hold the **my** button until there is a jiggle.

Press for 1 sec

Press for 5 secs

"MY" position deleted ✓

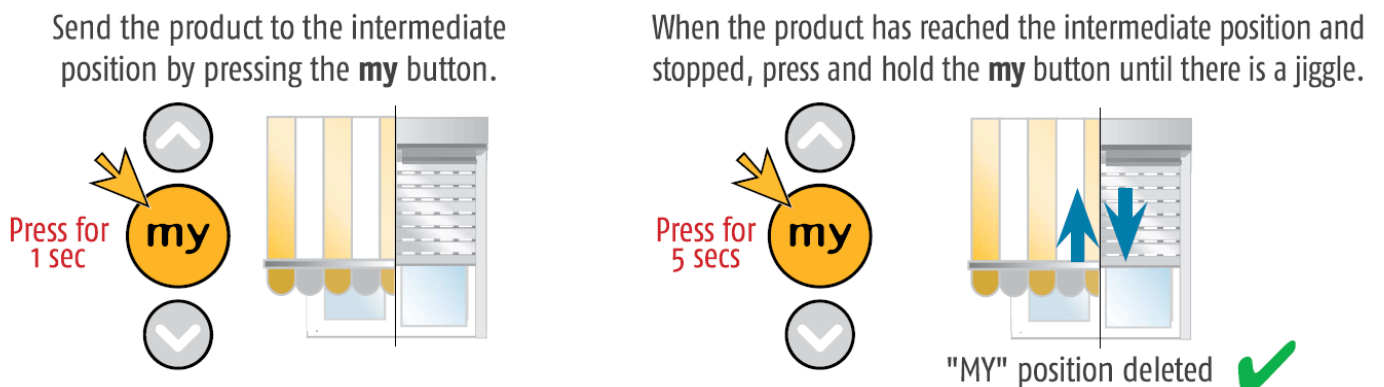

Using the Intermediate Position

The product must be stationary, but can be at any position. Press briefly the **my** button to initiate the intermediate or 'my' position. The product will automatically move to the IP or 'my' position and stop.

Press for 1 sec



Note: If an Intermediate Position has been set on an awning, & the awning is controlled by a Somfy RTS Sun Sensor, then the awning will only extend to the IP. Remove the IP function if the end user wants the awning to fully extend when the sun sensor is activated.

Flowchart for “MY” Position Positioning

