

Irismo Wirefree

Modifying the Favourite MY Position

Modifying the Favourite Position

1. Place the motorised product in the desired favourite position (my)
2. Press my for 5 seconds until the motorised product moves: the desired favourite position (my) has been programmed