

RTS Motor Hardwired

Pair New Channels or Remotes

Set the Motor in Programming Mode with an Existing RTS Control

RTS control
already assigned
to the motor



Smooove RTS


OR

Press for
3 secs



Situlo RTS

Press for
3 secs

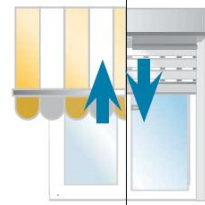

jiggle = motor ready
to record new control

Program the RTS Control

New RTS control
to assign to
the motor



Smooove RTS


OR

Press for
0.5 secs



Situlo RTS

Press for
0.5 secs

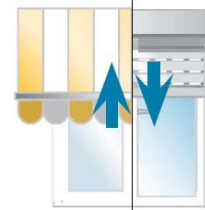

jiggle = new control
recorded

Somfy Tip: When using a multi-channel RTS control, remember to select the desired channel prior to programming

Flowchart for Pair New Channels or Remotes

