

Irismo Wirefree Programming

1. Programming Remote Control

- A. Connect battery pack to the motor.
- B. Press the Open and Close buttons on the RTS remote control at the same time: The motorised product moves up and down, and the RTS remote control is pre-programmed in the motor.

2. Setting the End Limits

- A. At the first command Open or Close, the motorised product make a first run to record the hard stop position.

3. Checking the Direction of Rotation

1. Press the Open button on the RTS remote control:
 - A. If the motorised product opens (a), the direction of rotation is correct.
 - B. If the motorised product closes (b), the direction of rotation is incorrect: Move onto the next step.
2. Press the MY button on the RTS remote control until the motorised product moves: The direction of rotation has been modified.
3. Press the Open button on the RTS remote control to check the direction of rotation.

4. Recording the RTS Control Point

Press the PROG button on the back of the remote control until the motorised product moves. The remote control address is permanently recorded.

5. Adjusting the Touch Motion Sensitivity

1. Press the Open and Close buttons of the RTS remote control simultaneously until the motorised product moves. LED is yellow, the motor enter touch motion sensitivity setting mode
2. Press the Open and Close buttons simultaneously until the motorised product moves to switch from high sensitivity, to low sensitivity, to no touch motion, and back to high sensitivity.
 - yellow LED fast blink for high sensitivity
 - yellow LED slow blink for low sensitivity
 - yellow LED on for no touch motion
3. Press the MY button until the motorised product moves to confirm the setting.

6. Adjusting the Speed

1. Press the Open and my buttons simultaneously until the motorised product moves. Green and red LED blink alternatively, the motor enter speed setting mode
2. Press the Open button to increase the speed, or the Close button to decrease the speed.

Note: There are 4 speed options: 12.5 cm/s (default speed) - 15 cm/s- 17.5 cm/s- 20 cm/s.

3. Press the MY button until the motorised product moves to confirm the setting.