



Somfy Automation

Programming Eolis & Soliris RTS Sensor

Programming the Sensor into the Motor Memory

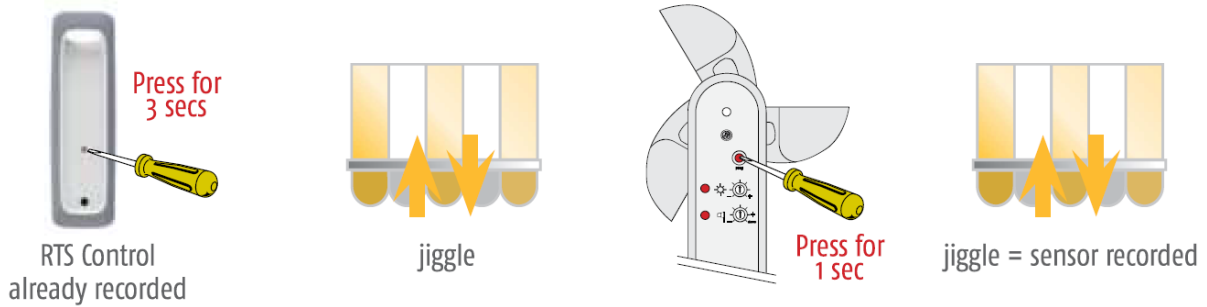

Commissioning the RTS Sensor

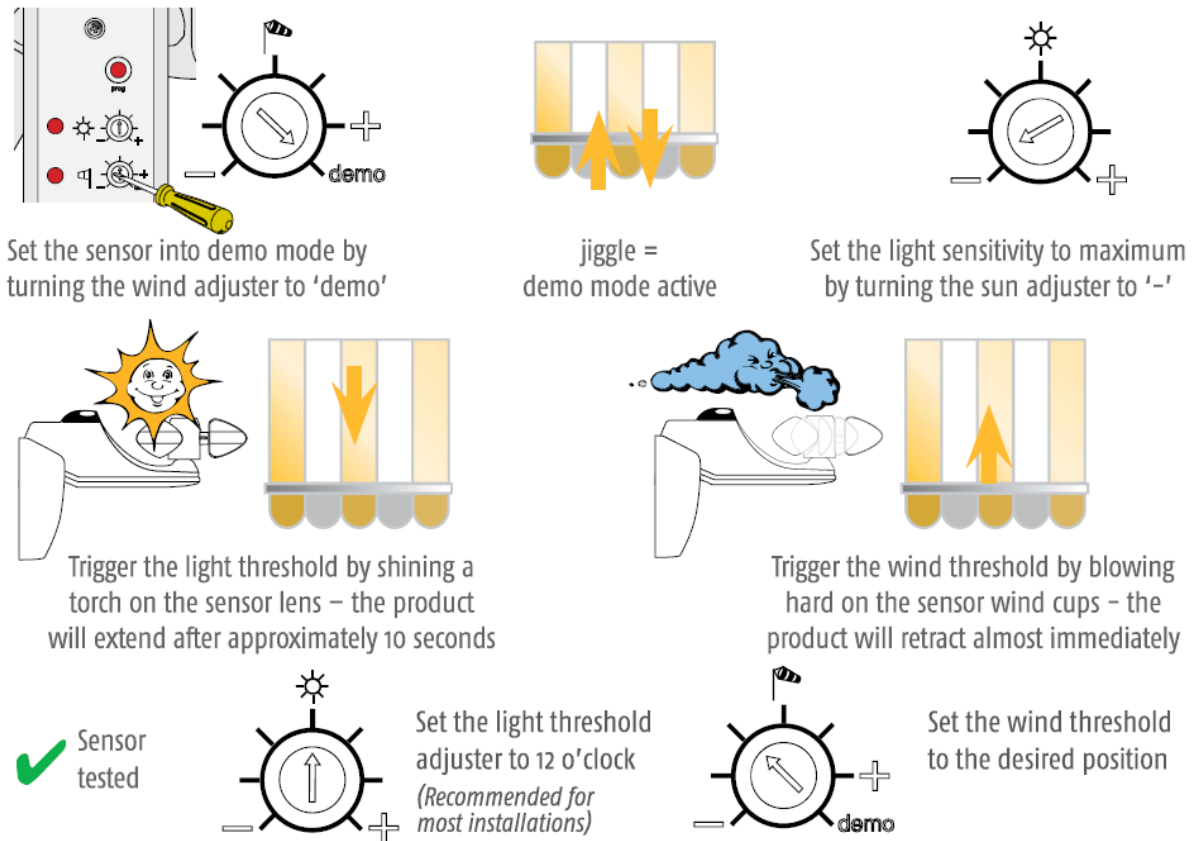

Somfy Tip: The product will automatically extend to the intermediate position when controlled by the sun sensor {if a "MY" position has been set}. If a "MY" position has not been set, the product will fully extend.

When a sensor is recorded into the memory of a motor, it regularly sends a security signal to confirm radio communication. If the sensor is faulty or damaged, the motor will not receive the signal and the product will retract. Remember to delete the sensor from the motor memory if the sensor is to be removed from the installation.

Flowchart for Sensor Programming

