

Irismo Wirefree

Re-Setting the Close End Limits

Readjusting the Close End Limit

1. Press the Close button to move the motorised product to the end limit to be readjusted. the LED is red blink
2. Press the Open and Close buttons of the RTS remote control simultaneously until the motorised product moves.
3. Press the Open or Close button to move the motorised product to the new desired position.
4. To confirm the new end limit, press the MY button until the motorised product moves.