

# RTS Motor Hardwired

## Removing an RTS Control from the Motor

**Note:** Using this method you will not be able to delete the final remote programmed. Refer to 'erasing the memory of the motor' section to delete all remotes and sensors.

### Set the Motor in Programming Mode with an Existing RTS Control

RTS control  
already assigned  
to the motor



Smoove RTS

OR

Press for  
3 secs



Situ RTS

Press for  
3 secs



Jog = motor ready  
to remove control

### De-Program the RTS Control

RTS control  
to be removed  
from the motor



Smoove RTS


OR

Press for  
1 sec



Situ RTS

Press for  
1 sec

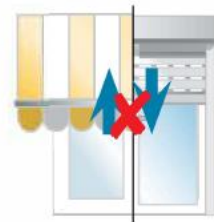

Jog = control  
removed

## Flowchart for Removing an RTS Control from the Motor

