

PowerView Scene Controller

Troubleshooting

1. There is nothing on the screen and none of the backlit buttons illuminate on my Scene Controller when I press the buttons.

- Check to make sure the batteries are inserted properly and are new.

2. The Scene name is blinking on the OLEO screen after I pressed "select".

- This is normal behavior. The Scene name will stop blinking after the Hub has confirmed the Scene has been successfully activated.

3. I cannot get my Scene Controller to communicate with the Hub.

- Make sure the batteries in the Scene Controller are fresh, and that the Hub has a solid blue light.
- Move the Scene Controller closer to the Hub, or install additional repeaters, to improve wireless communication.
- Select "Forget This Controller?" from the Scene Controller menu and re-configure (see Programming and Operation section).

4. Battery Life of Scene Controller Module is less than expected.

- When the Pebble Scene Control is picked up, the Scene Controller Module's motion back lights are activated.

In situations where the remote control is under constant movement, the motion back lighting can activate more often than normal causing the batteries to deplete at a faster rate.

- It is possible to disable the motion back light function by pressing and holding the 6 channel button for 6 seconds.
- To re-enable motion back light press and hold the 6 channel button for 6 seconds.

