


# Timber Shutters

## Replacing Clearview Control Rod

For this replacement, you will require the following tools:

- a. Phillips Screwdriver
- b. Stanley Knife
- c. Spring-loaded Pin
- d. Louvre Clearview Screws

1. Remove the brass screws from the control rod

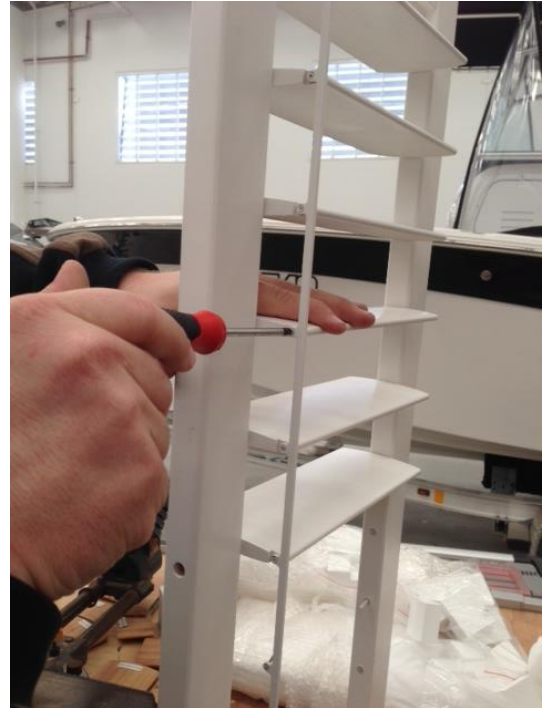


2. With a sharp blade, cut between the stile and the louvre that has to be replaced carefully. Preferably do this on the hinged side of the door.



3. Remove the damaged louvre and pin that was cut in the door



4. Place the spring-loaded pin from the louvre repair kit that would have been supplied with your louvre into the stile

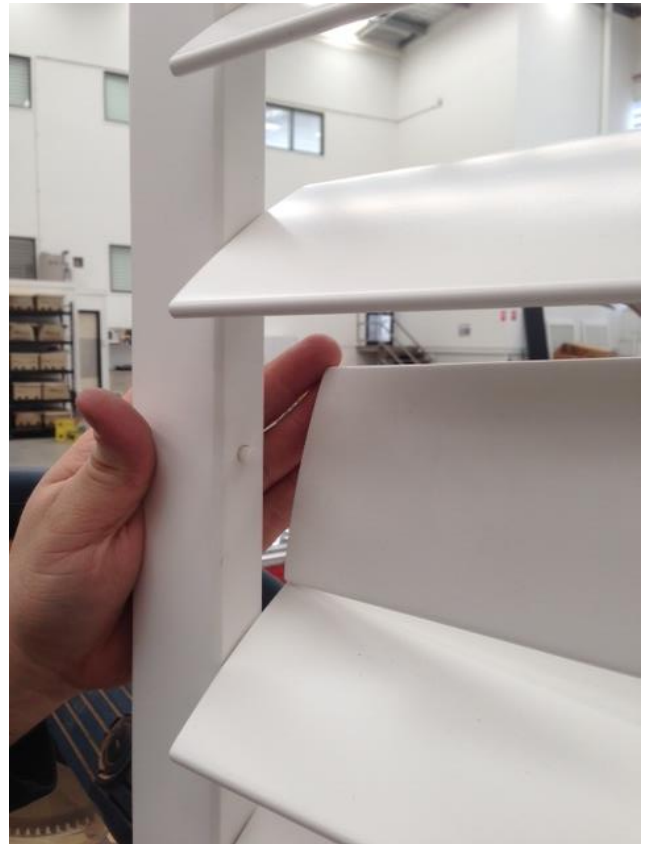

5. Place the new louvre into the door by first placing the louvre onto the solid pin in the door then depress the spring-loaded pin then place the louvre over it. The louvre should click into place. Keep in mind the check out for the control rod must be located near the control rod



6. Replace the brass screw back into the control rod

