


Timber Shutters

Replacing a Centre Control Rod

For this replacement, you will require the following tools:

- a. Phillips Screwdriver
 - b. Stanley Knife
 - c. Spring-loaded Pin
 - d. Control Pin
 - e. Hammer & Punch
1. Remove the pin that is holding the louvre to the center control rod from the louvre with a pair of pliers

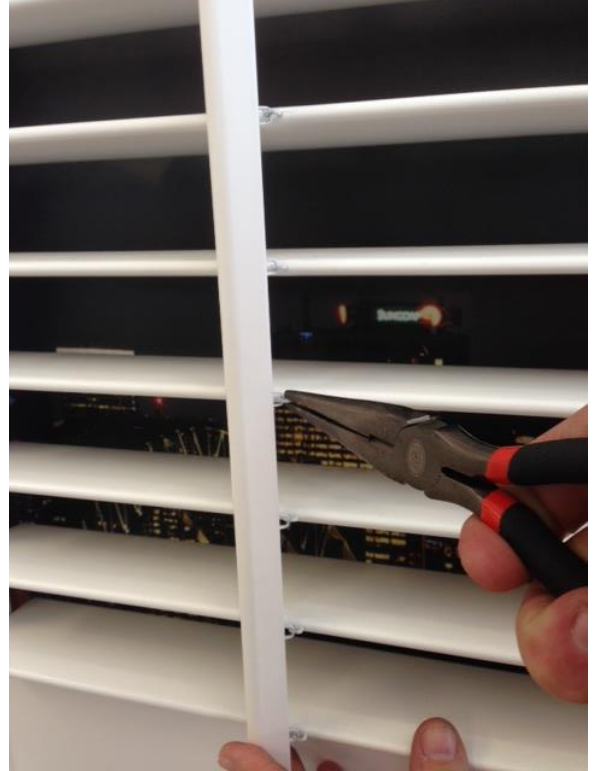


2. With a sharp blade, cut between the stile and the louvre that must be replaced carefully. Preferably do this on the hinged side of the door.



3. Remove the damaged louvre and pin that was cut in the door



4. Place the spring-loaded pin from the louvre repair kit that would have supplied with your louvre into the stile

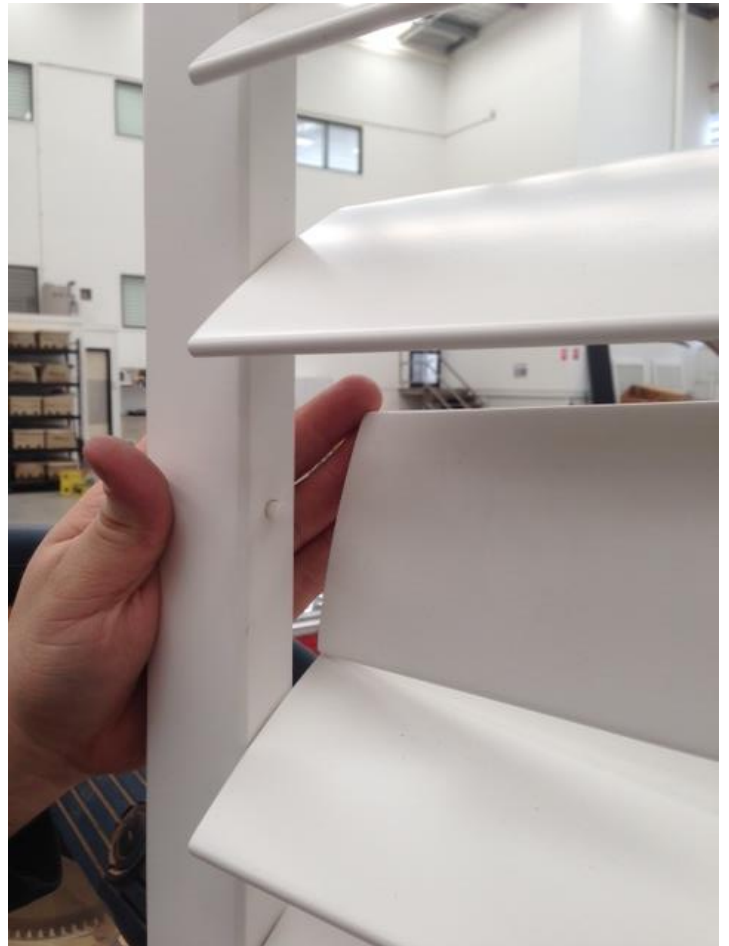

5. Place the new louvre into the door by first placing the louvre onto the solid pin in the door then depress the spring-loaded pin, then place the blade over it. The louvre should click into place



6. With a small Hammer and Punch, gently tap the replacement control pin through the center control rod into the louvre.

