

Roller Blinds


Motor Tail Hole Location

Somfy Motorised Roller Blind Hole Position for Motor Tail

For hole position in the window frame, a 25mm hole will need to be drilled to allow the plug to be pushed up into the wall. The hole should be 50mm in from the side of the reveal and as close to the glass as possible (as seen below). The safety housing should be used if the plug is not pushed into the wall cavity.

Standard motor tails are supplied at a 2.00m length, however these can be cut down to the required length for the individual application, in most installations leaving 150mm of tail exposed is enough for blind installation to be completed.

Single Roller Hole Position

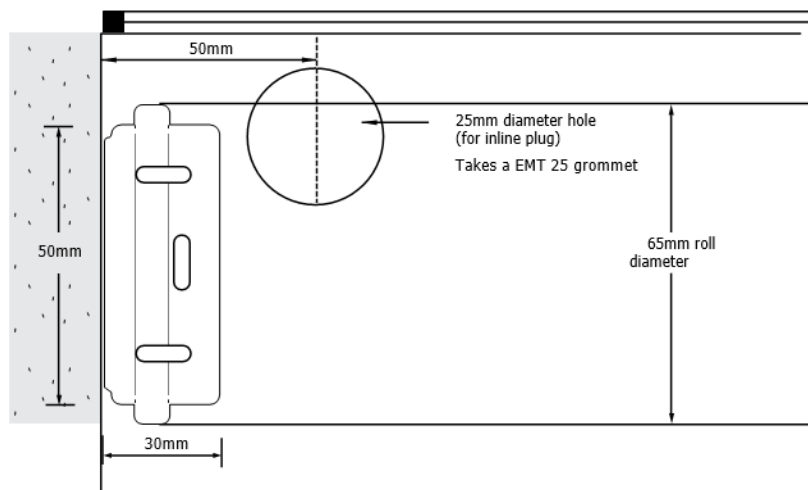

Dual Roller Hole Position

