


Roller Blinds

Motor Tail Hole Location

Somfy Motorised Roller Blind Hole Position for Motor Tail

For hole position in the window frame, a 25mm hole will need to be drilled to allow the plug to be pushed up into the wall/ceiling cavity. The 25mm hole must be drilled completely through to the cavity to enable the excess cable to be pushed through. The hole should be 50mm in from the side of the reveal and as close to the glass as possible (as seen below). The safety housing should be used if the plug is not pushed into the wall cavity.

Standard motor tails are supplied at a 2.00m length, however these should be cut down to the required length for the individual application, leaving no more than 150mm of tail exposed. Leaving more than 150mm tail exposure may cause difficulty pushing the excess cable back into the cavity.

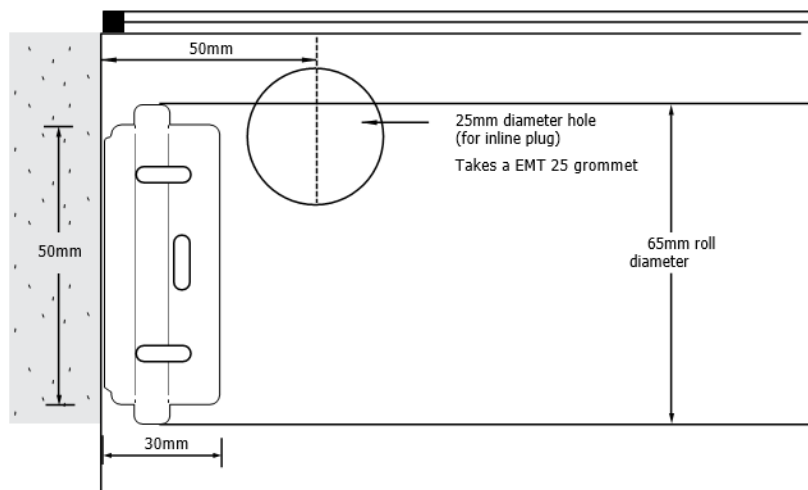

Dual Roller Hole Position

