

# Glydea DCT

## Changing the Motor Direction

**Note:** A small paper clip is required for pressing the Mode and Set buttons

### 1. Enter Programming Mode




Press and hold the Mode button until the Green LED appears.

### 2. Reverse Motor Direction



Briefly press the set button.

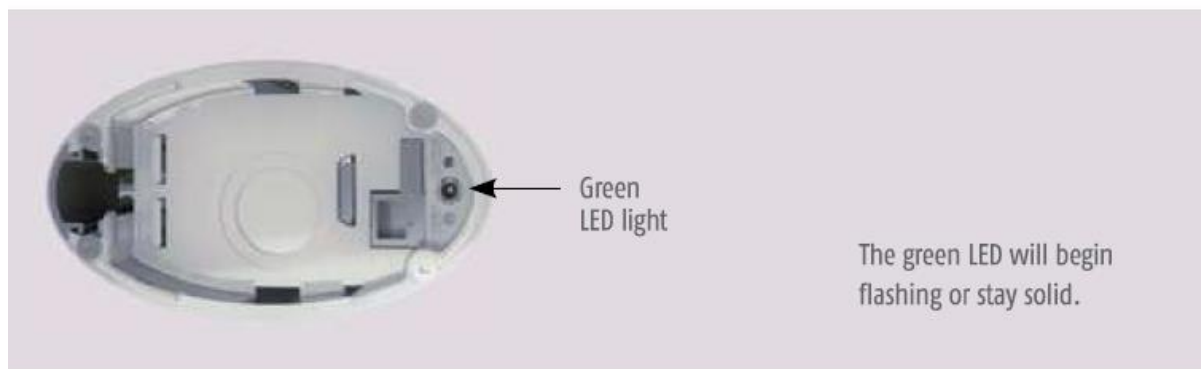


The green LED will begin flashing or stay solid.



Press and hold the mode button until the Green LED turns off. The motor direction has been changed.

## Flowchart for Changing the Motor Direction

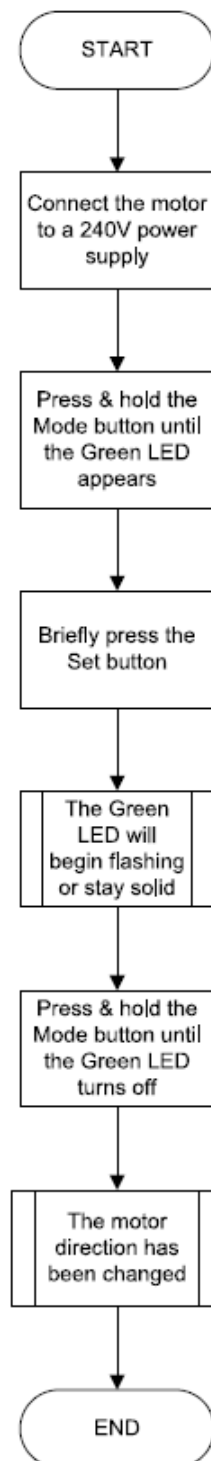

\*Note: A small paper clip is required for pressing the Mode & Set buttons,