

# Glydea DCT

## Changing the Close Limits

**Note:** A small paper clip is required for pressing the Mode and Set buttons

### 1. Enter Programming Mode




Press and hold the Mode button until the Green LED appears.



Briefly press the Mode button twice. A Red LED will begin to blink.


### 2. Set New Close Limit

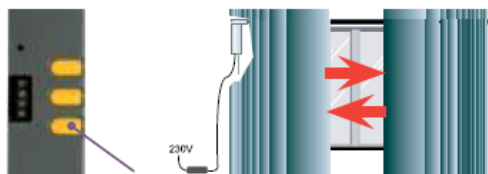

Move the curtain to the new close limit.



Briefly press the Set button to confirm.

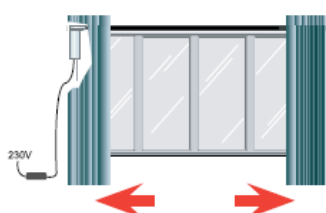

The motor will move to the open limit.

### 3. Save New Close Limit



Set/Select  
button

Press and hold the Mode  
button until the Red LED  
turns off. The close limit  
has been changed.

## Flowchart for Changing the Close Limits

