

# MAGNATRACK

## DONUT ADJUSTMENTS

Refer to the following steps when Donut rectification is required:

**Note: After altering the Donut's at any point, ensure the fabric is centred on the tube before & during fabric rolling up**

- Set blind limits
- Lower & Raise the blind through full limits
- Raise the blind to the top limit


### Bottom Rail Smile

- If Bottom Rail has a smile, lower the blind to maximum drop exposing the tube & move both donuts towards the centre of the tube; small increments at a time. (E.g. 3 to 5mm at a time)
- The smile can also be reduced by pulling down on the bottom rail on the sides affected when the bottom rail is at the top limit which allows the fabric to settle



### Bottom Rail Frown

- If bottom rail has a frown, lower the blind to the maximum drop exposing the tube & move the donuts away from the tube centre; small increments at a time. (E.g. 3 to 5mm at a time)

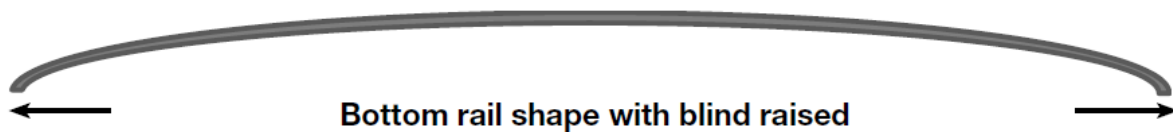

### Uneven Bottom Rail on 1 Side

- If only one side of the bottom rail has a smile/frown, lower the blind to maximum drop exposing the tube & move the donut on that side only; small increments at a time. (E.g. 3 to 5mm at a time)

