

Glydea DCT

Modifying the Motor Speed

1. Enter Programming Mode




Press and hold the Mode button until the Green LED appears.



Briefly press the Mode button 4 times.

2. Change the Motors Speed

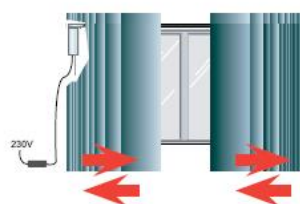

The LED will begin flashing Green and Red. The motor will continuously open and close.



Toggle the speed setting by briefly pressing the Set button.




Briefly press the Mode button to confirm speed. A Green LED will appear.

3. Save New Speed



Press and hold the Mode button until the Green LED turns off. The motor speed has been changed.

Flowchart for Modifying the Motor Speed

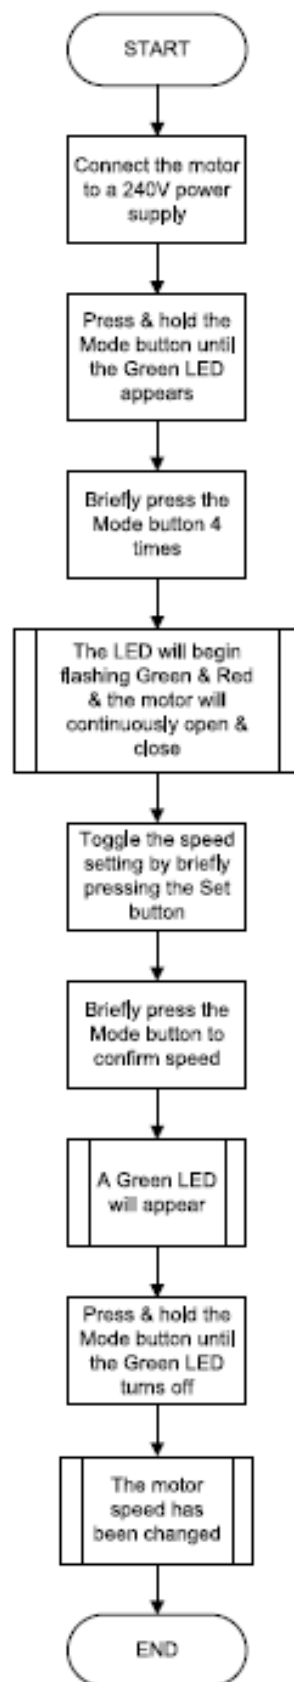

Note: A small paper clip is required for pressing the Mode & Set buttons.